

PermaroofUK<sup>®</sup>

Termination to adjacent flat roof detail



## Termination to adjacent flat roof detail

As with all details, make sure the area is clean and free of loose debris. A minimum 50mm overlap onto the adjacent material is required.



Apply contact adhesive to the back of the membrane and also the deck...



Mate the membrane to the deck once the adhesive has become tacky.



Then create a straight edge on the membrane using a crayon and cut away any excess material along the line.




Apply a bead of Water Block sealant underneath the edge of the membrane.




Use All-Purpose fasteners to secure the termination bar to the deck.



The Water Block sealant will squeeze out from the termination during fixing. Wipe any excess sealant away.

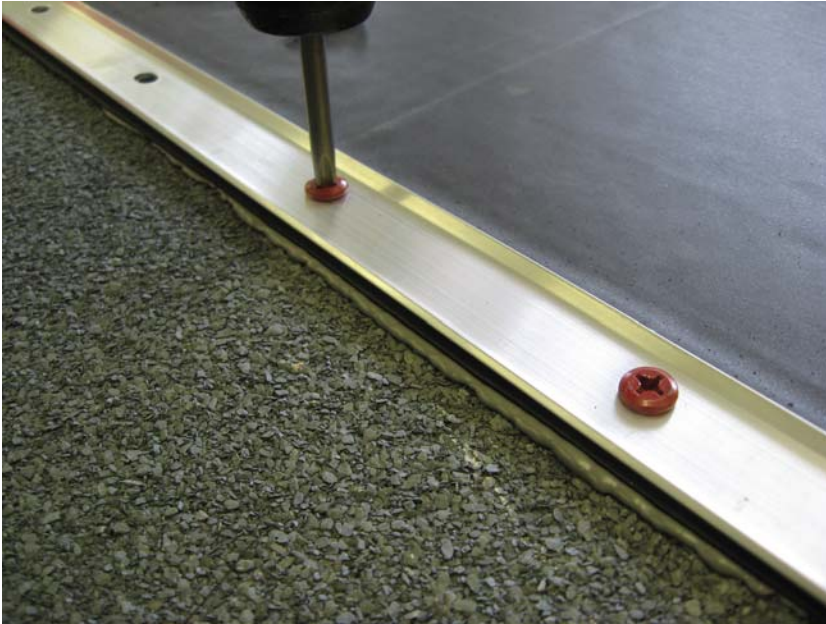

The finished detail.

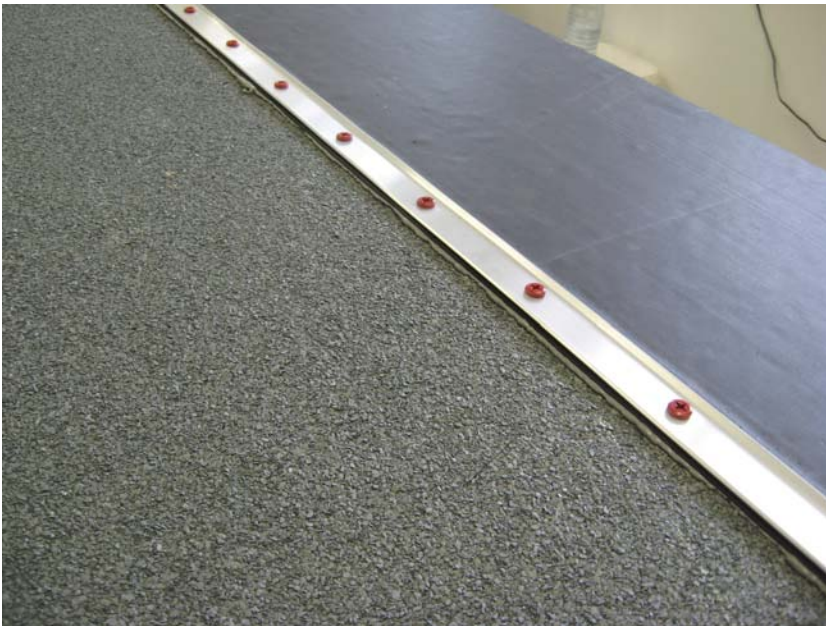

**Important note:** Termination bars have to be cut at angle changes, and not bent around corners. The resulting ends are to be spaced no more than 10mm apart. A patch of Quickseam Formflash is also required to waterproof this area.